



INTRODUCING HMI

The Hoist Manufacturer's Institute (HMI), an affiliate of Material Handling Industry, is a trade association of manufacturers of overhead handling hoists. The products of its member companies include hand chain hoists, ratchet lever hoists, trolleys, air chain and air rope hoists, and electric chain and electric wire rope hoists.

HMI operates through committees with programs and policies reviewed and adopted by the membership with representation from each member company. HMI is represented on a number of standards developing committees and actively supports the development and certification of safety standards by the ANSI consensus method.

HMI member companies are concerned, conscientious manufacturers affiliated in an industry association to provide voluntary standards for the mechanical, structural and electrical design of hand chain hoists, ratchet lever hoists, trolleys, air chain and air rope hoists, and electric chain and electric wire rope hoists and to formulate guidelines for the proper use, operation and maintenance of that equipment.

Hoist Manufacturers Institute
8720 Red Oak Boulevard
Suite 201
Charlotte, NC 28217-3992
Ph.: (704) 676-1190
Fax: (704) 676-1199
www.mhia.org/hmi

RECOMMENDED PRACTICES HAND CHAIN MANUALLY OPERATED CHAIN HOISTS

Because the manufacturer has no direct control over the hoist and its operation, conformance with good safety practice is the responsibility of the user and operating personnel. ANSI/ASME B30.16 has been used as a guide in preparing this list of SHALL's and SHALL NOT's. Ask your supervisor for a copy. Each is identified according to ANSI/NEMA Z535.4 with either the signal word CAUTION or WARNING to indicate the degree of seriousness.



WARNING

Improper operation of a hoist can create a potentially hazardous situation which, if not avoided, could result in death or serious injury. To avoid such a potentially hazardous situation, the operator shall:

1. NOT operate a malfunctioning or unusually performing hoist.
2. NOT operate the hoist until you have thoroughly read and understood the manufacturer's Operating and Maintenance Instructions or Manuals.
3. NOT operate a hoist which has been modified without the manufacturer's approval or certification to be in conformity with applicable OSHA regs.
4. NOT lift or pull more than rated load for the hoist.
5. NOT use damaged hoist or hoist that is Not working properly.
6. NOT use hoist with twisted, kinked, damaged, or worn load chain.
7. NOT use the hoist to lift, support, or transport people.
8. NOT lift loads over people and make sure all personnel remain clear of the supported load.
9. NOT attempt to lengthen the load chain or repair damaged load chain.
10. Protect the hoist's load chain from weld splatter or other damaging contaminants.
11. NOT use load chain as a sling or wrap load chain around load.
12. NOT apply the load to the tip of the hook or to the hook latch.
13. NOT apply load unless load chain is properly seated in the chain wheel(s) or sprocket(s).
14. NOT apply load if bearing prevents equal loading on all load supporting chains.
15. NOT operate beyond the limits of the load chain travel.
16. NOT leave load supported by the hoist unattended unless specific precautions have been taken.
17. NOT allow the chain or hook to be used as an electrical or welding ground.
18. NOT allow the chain or hook to be touched by a live welding electrode.
19. NOT remove or obscure the warnings on the hoist.
20. NOT operate a hoist which has Not been securely attached to a suitable support.
21. NOT operate a hoist unless load slings or other approved single attachments are properly sized and seated in the hook saddle.
22. NOT operate a hoist when it is restricted from forming a straight line from hook to hook in the direction of loading.
23. NOT lift loads that are Not balanced and that the holding action is Not secure, taking up slack carefully.
24. NOT operate a hoist unless all persons are and remain clear of the supported load.
25. Report malfunctions or unusual performances of a hoist, after it has been shut down until repaired.
26. NOT operate a hoist on which the safety placards or decals are missing or illegible.
27. Be familiar with operating controls, procedures, and warnings.



CAUTION

Improper operation of a hoist can create a potentially hazardous situation which, if not avoided, could result in minor or moderate injury. To avoid such a potentially hazardous situation, the operator shall:

1. Maintain a firm footing or be otherwise secured when operating the hoist.
2. Check brake function by tensioning the hoist prior to each lift or pulling operation.
3. Use hook latches. Latches are to retain slings, chains, etc. under slack conditions only.
4. Make sure the hook latches are closed and not supporting any parts of the load.
5. Make sure the load is free to move and will clear all obstructions.
6. Avoid swinging the load or hook.
7. Inspect the hoist regularly, replace damaged or worn parts, and keep appropriate records of maintenance.
8. Use the hoist manufacturer's recommended parts when repairing the unit.
9. Lubricate load chain per hoist manufacturer's recommendations.
10. NOT use the hoist load limiting or warning device to measure load.
11. NOT operate except with manual power.
12. NOT permit more than one operator to pull on a single hand chain at the same time. More than one operator is likely to cause hoist overload.
13. NOT allow your attention to be diverted from operating the hoist.
14. NOT allow the hoist to be subjected to sharp contact with other hoists, structures, or objects through misuse.
15. NOT adjust or repair the hoist unless qualified to perform such adjustments or repairs.

DISCLAIMER

Under no circumstances does the Hoist Manufacturers Institute (HMI) assume any liability for the use of these voluntary recommendations, and no warranty whatsoever is made in connection with them. The recommendations do not take precedence over existing plant safety rules and regulations, OSHA regulations or instructions issued by the Hoist Manufacturer. It is the user's intent to absolve and protect HMI from any and all liability, in tort or otherwise.



MEMBERS* of the HOIST MANUFACTURERS INSTITUTE

Acco Chain & Lifting Products
P.O. Box 792
York, PA 17405-0792
(800) 967-7333

Ace World Companies, Inc.
10200 Jacksboro Hwy.
Fort Worth, TX 76135
(817) 237-7700

Chester Hoist, Inc.
P.O. Box 449
Lisbon, OH 44432
(330) 424-7248

Columbus McKinnon Corporation (CM)
140 John James Audubon Parkway
Amherst, NY 14228-1197
(716) 689-5400

Demag Cranes and Components Corporation
29201 Aurora Road
Solon, OH 44139-1895
(440) 248-2400

Electro Lift Inc.
204 Sargeant Avenue
Clifton, NJ 07013
(973) 471-0204

Harrington Hoists Inc.
401 West End Avenue
Manheim, PA 17545
(717) 665-2000

Ingersoll-Rand Company
P.O. Box 970
Annandale, NJ 08801
(908) 238-7000

Lift-Tech International, a division of Columbus
McKinnon Corporation
P.O. Box 769
Muskegon, MI 49443
(231) 733-0821

Morris Material Handling, LLC
315 West Forest Hill Avenue
Oak Creek, WI 53154
(414) 764-6200

R & M Materials Handling Inc.
4501 Gateway Blvd.
Springfield, OH 45502-9339
(937) 328-5100

Ratcliff Hoist Company, Inc.
1655 Old County Road
San Carlos, CA 94070
(650) 595-3840

Saturn Engineering Corporation
10 Main Street
Newark, NJ 07105
(973) 465-0224

Shepard Niles Inc.
250 North Genesee Street
Montour Falls, NY 14865
(607) 535-7111

Yale Industrial Products, Inc.
P.O. Box 411245
Charlotte, NC 28241-7010
(704) 583-0095